





ASSEMBLY INSTRUCTION

MODEL : HM 350.01

DESC : 2 DOOR TOP CLOSET WITH WARDROBE




HARDWARE


A	WOOD DOWEL 6 X 30	8
B	HANDLE 108 -8MM (PVC)	2
C	CD SCREW M4X25MM	8
D	CD SCREW M4X25MM	8
E	HINGLES 5/8	4 SETS
F	CD SCREW M3,5X12MM	16
G	CD SCREW M3,5X12MM	16

PART LIST


STEP 1

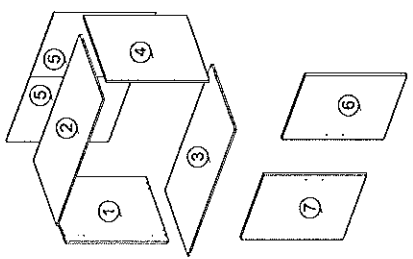


STEP 2

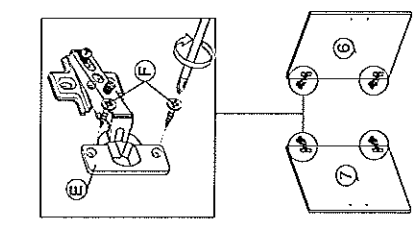


STEP 3

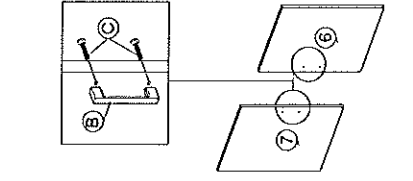


STEP 4

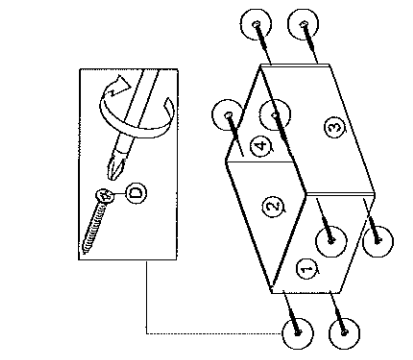


STEP 5

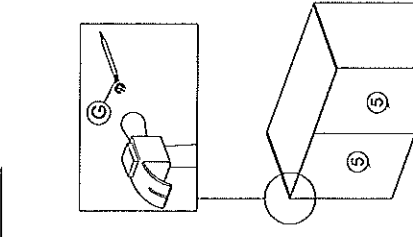


STEP 6

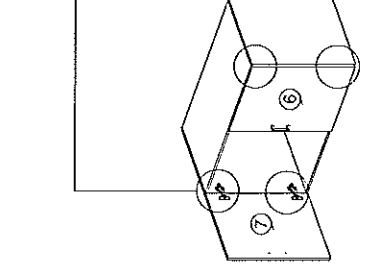

COMPLETED

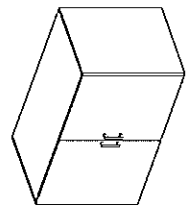

STEP 1



COMPLETED

